
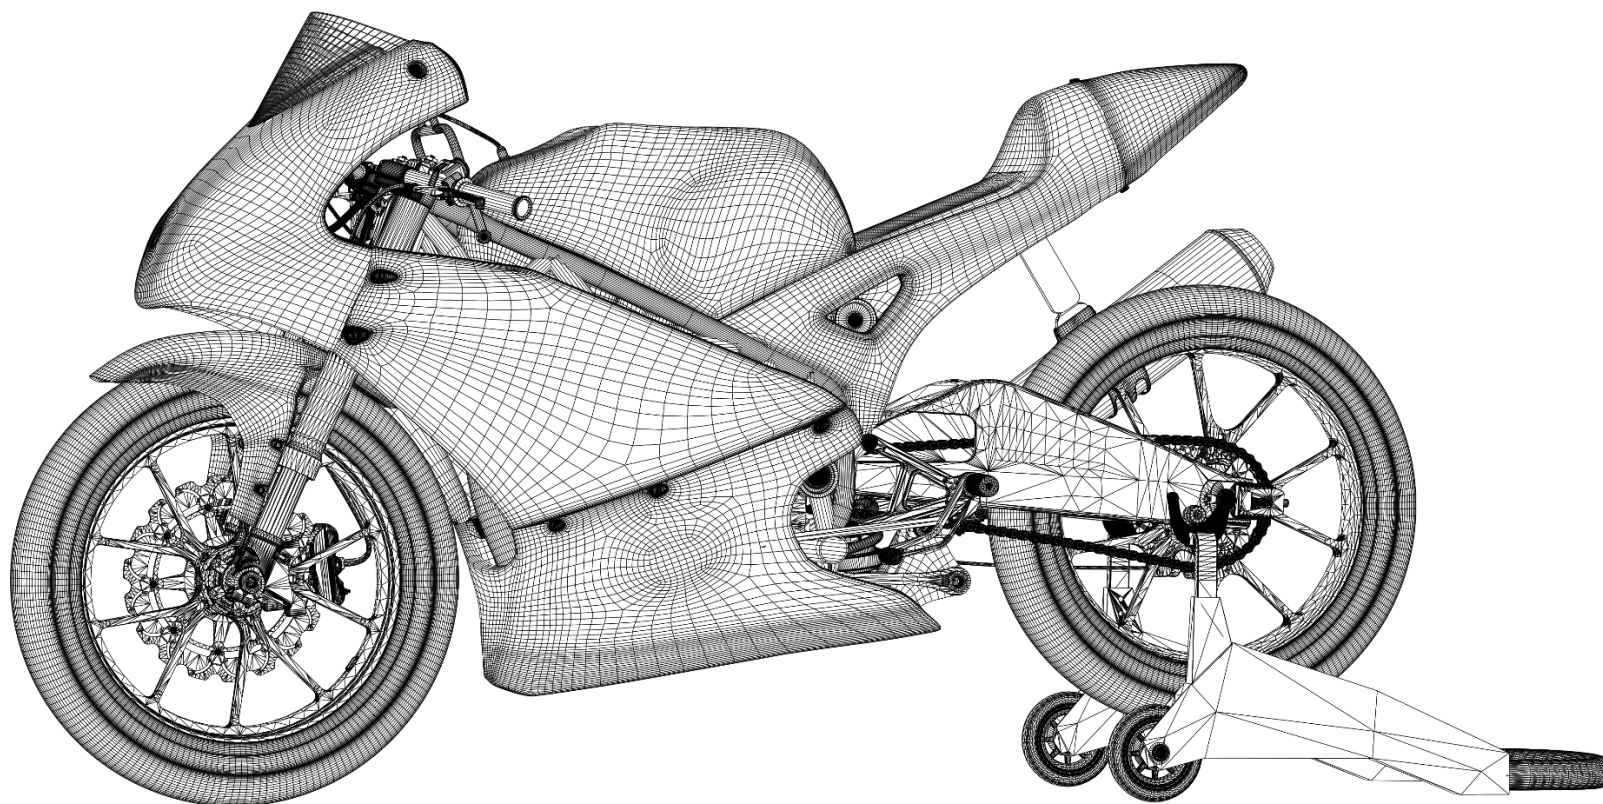



SPARE PARTS CATALOGUE

MOTO 5 - 2025

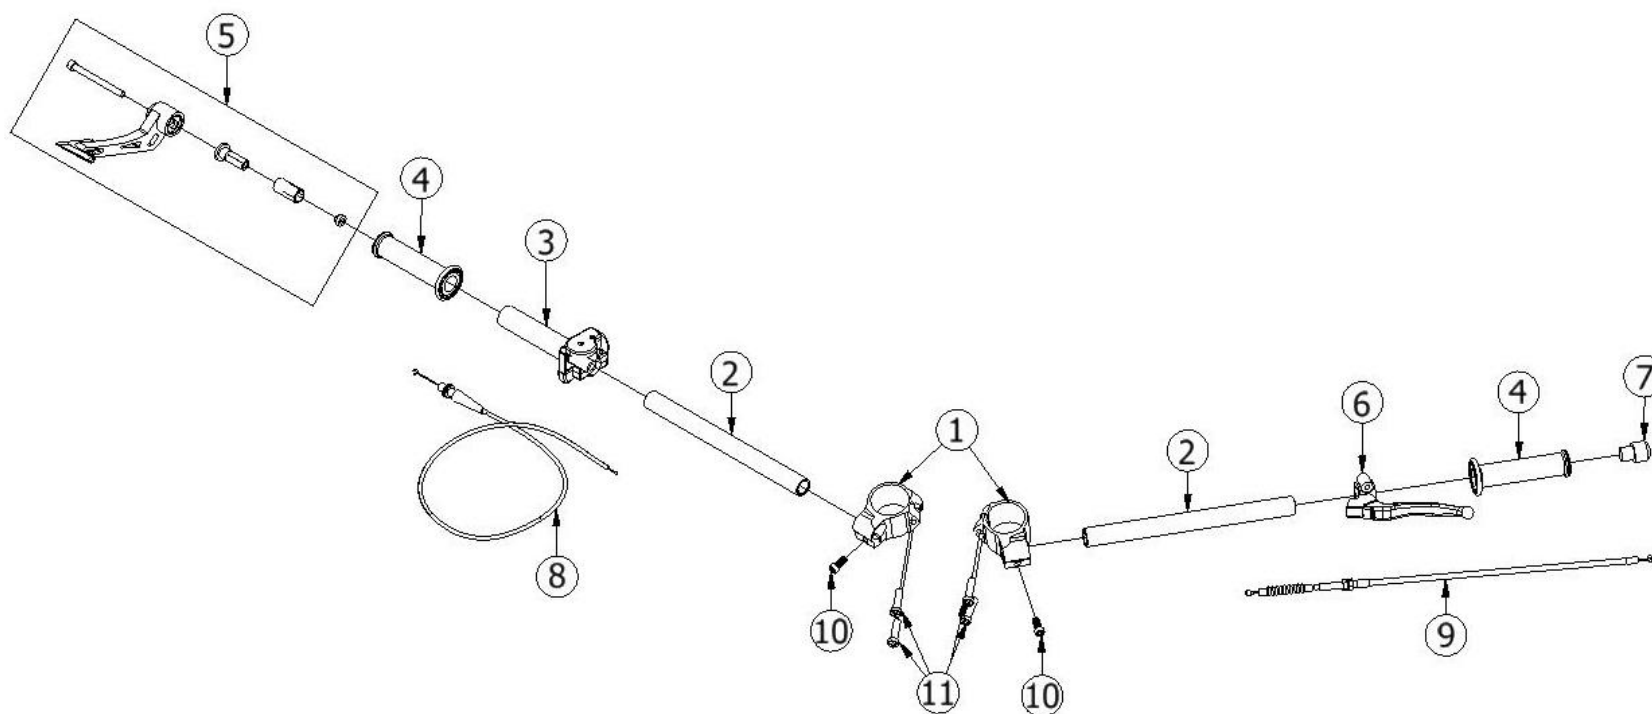



1. HANDLE LEVER / THROTTLE / CABLES / HOLDERS / PROTECTORS

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	8716			HOLDER, PIPE	1
2	1765	6921		HANDLEBAR	2
3	5908	4496	5387	THROTTLE	1
4	1348	7420		GRIP HANDLE	2
5	6405			KIT HANDLE COVERS, HANDLEBAR	1
6	5389	2987		LEVER, CLUTCH	1
7	4110			CAP, HANDLEBAR	1
8	6067	0528		CABLE, THROTTLE	1
9	4001			CABLE, CLUTCH	1
10	0629			BOLT M8X30	2
11	2062			BOLT M8X16	4

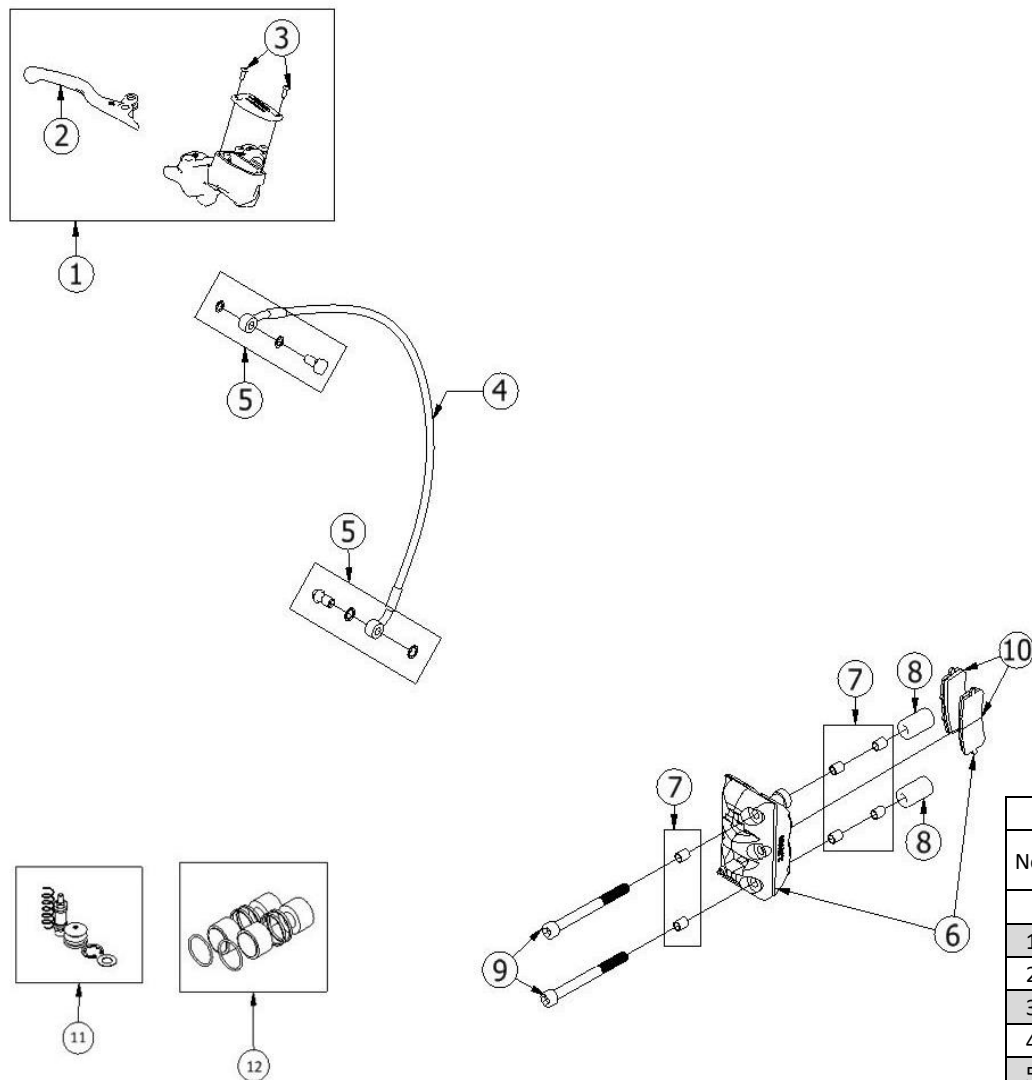


2. FRONT BRAKE MASTER CYLINDER / CALIPER / REPAIR KIT

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	3000	7875	1713	FR. BRAKE PUMP FORMULA / J.JUAN	1
2	3003	7965	1714	LEVER, FR. BRAKE PUMP FORMULA / J.JUAN	1
3	3790	8008	3154	BOLT, FR. BRAKE COVER FORMULA / J.JUAN	2
4	4930	7870	4931	HOSE, FR. BRAKE FORMULA / J.JUAN	1
5	6922	2492		RACOR BOLT & WASHER, FR. BRAKE PUMP FORMULA / J. JUAN	2
6	1715	2569		J.JUAN BRAKE CALIPER & PAD SET	1
7			7188	SPACE CENTERING, BRAKE CALIPER	6
8	1913			SPACER, BRAKE CALIPER	2
9	7428			BOLT M8x100, BRAKE CALIPER	2
10	6080			BRAKE PAD SET, CALIPER FORMULA / J.JUAN	1
11	3792			REPARATION BRAKE PUMP FORMULA	1
12	6332			REPARATION CALIPPER KIT J.JUAN	1

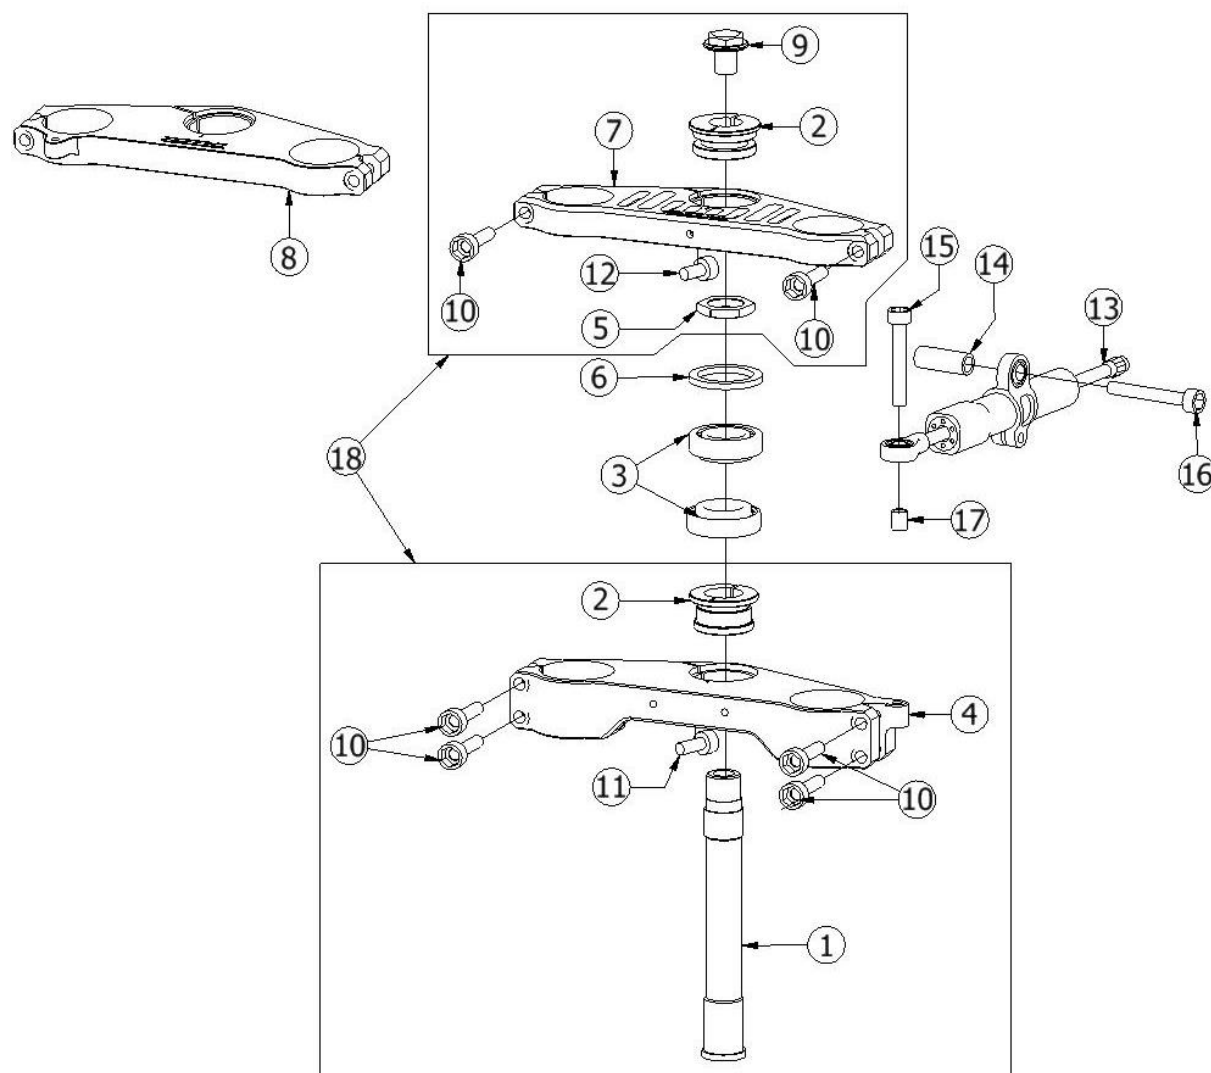


3. STEERING STEM (33,5MM) / OP2 (28MM)


No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	5366			STEERING AXLE	1
2	7053	7054	7055	UNDER & UPPER ECCENTRIC PIPE (22MM)	1
3	5367			BEARING, HEAD PIPE	2
4	3846	3845		UNDER STEM	1
5	0479			NUT M22, HEAD PIPE	1
6	1741			DUST SEAL	1
7	3848	3847		STEM UP (A)	1
8	6543			STEM UP (B)	1
9	5368			BOLT M14x17, STEERING AXLE	1
10	3187	2059		BOLT M8x35	6
11	1253			BOLT M8x20	1
12	2062	4808		BOLT M8x16	1
13	6190			STEERING CUSHION	1
14	1880			SPACER, STEERING CUSHION	1
15	7519			BOLT M8x55	1
16	7520			BOLT M8x60	1
17	7522			SPACER, BALL JOINT	1
18	1912	7070		STEM SET	1
1	7145			STEERING AXLE (21MM)	1
2	3857	3855	5476	UNDER & UPPER ECCENTRIC PIPE (21MM)	1

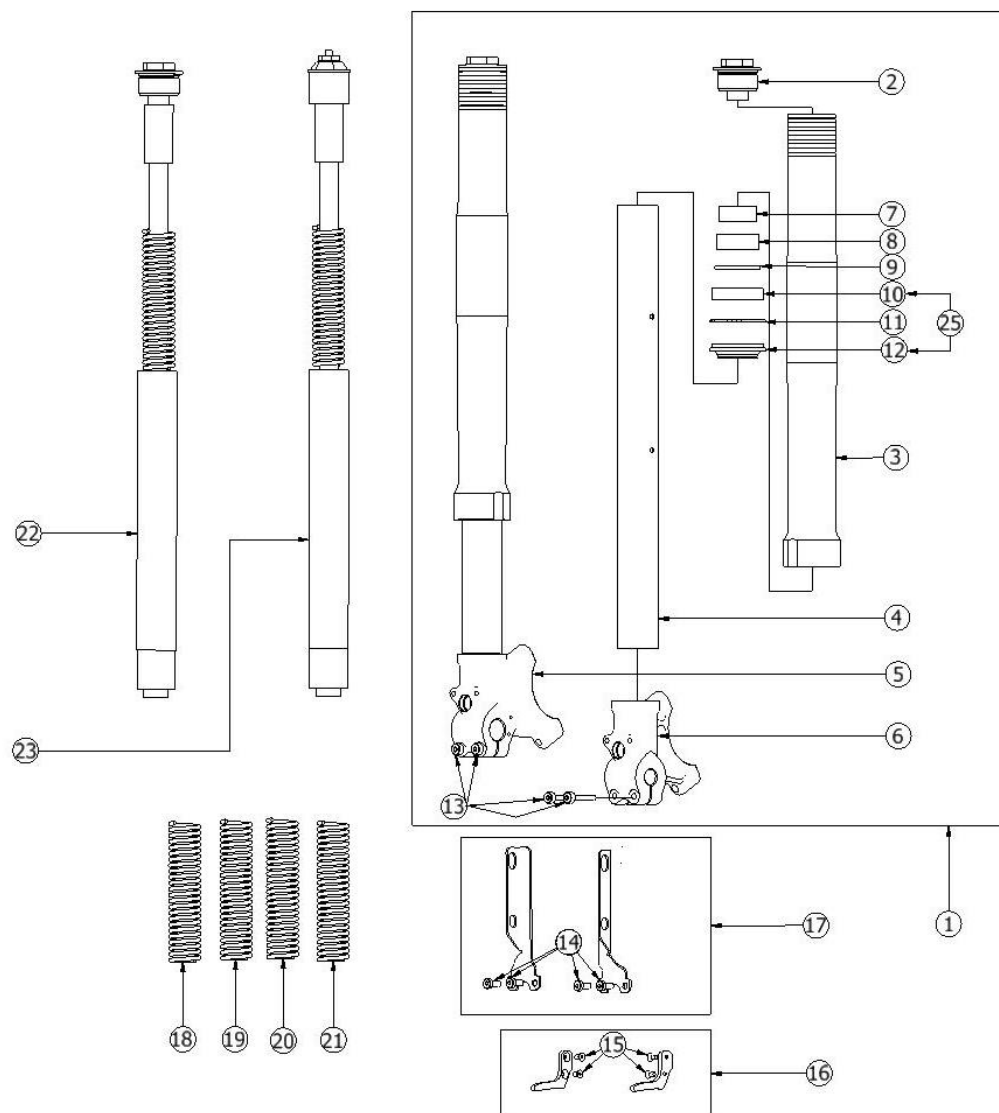


4. FRONT FORK					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	8295			FORK ASSY (625MM)	1
2	3064	7228		CAP, FORK	1
3	5965			OUTER BODY FORK	1
4	5968			INNER BODY FORK	1
5	5974			R. FOOT FORK	1
6	5902			L. FOOT, J JUAN FORK	1
7	6480			SLIDE COLLAR	1
8	0298	5617		GUIDE COLLAR	1
9	6481			RING BACK UP	1
10	4442	3805		OIL SEAL	1
11	6638			O-RING, OIL SEAL STOPPER	1
12	1037			SEAL DUST	1
13	1254			BOLT M6x30	4
14	5933			BOLT M6x12	4
15	7190			BOLT M4x12	4
16	3275			HOLDER WHEEL FR.	1
17	3457			FR. FENDER SUPPORT	1
18	4887			SPRING K = 4	1
19	4888			SPRING K = 5	1
20	5599			SPRING K = 6	1
21	6590			SPRING K = 7	1
22	7416			DAMPER COMP. FR.	1
23	4139			DAMPER COMP. FR. ANDREANI	1
24	7229			FORK ADJUSTER	1
25	2294			OIL SEAL AND SEAL DUST	1

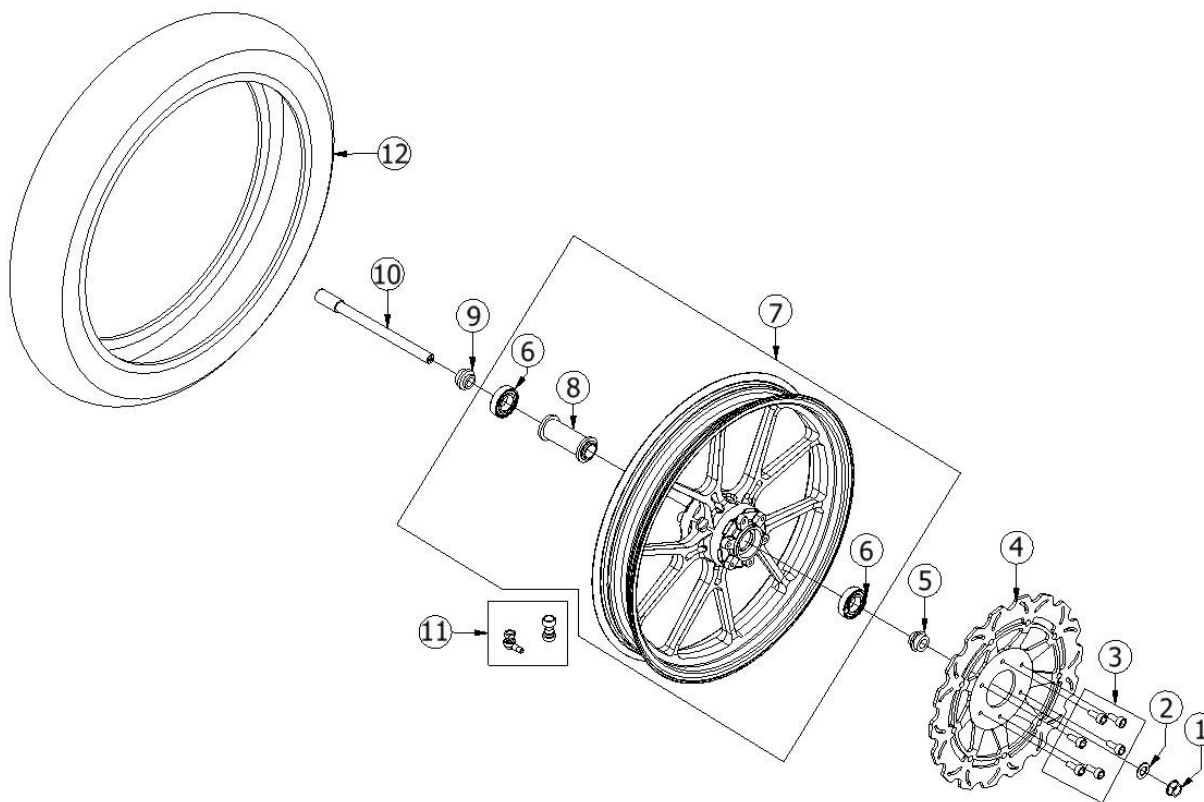
5. FRONT WHEEL

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	5354			NUT, AXLE WHEEL	1
2	5475			WASHER, AXLE WHEEL	1
3	5940			BOLT M8x20 REDUCED HEAD, FR. BRAKE DISK	6
4	5320			FR. BRAKE DISK	1
5	4440			COLLAR L., FR. BRAKE DISK	1
6	0635			BEARING, FR. WHEEL	2
7	4254		0642	FR. RIM 17", BEARINGS & COLLAR	1
8	5318			COLLAR, INSIDE RIM	1
9	2499			COLLAR R., FR. WHEEL	1
10	5315			AXLE, FR. WHEEL	1
11	1010	2613		VALVE	1
12	6602	6592		FR. TIRE (M) DUNLOP	1

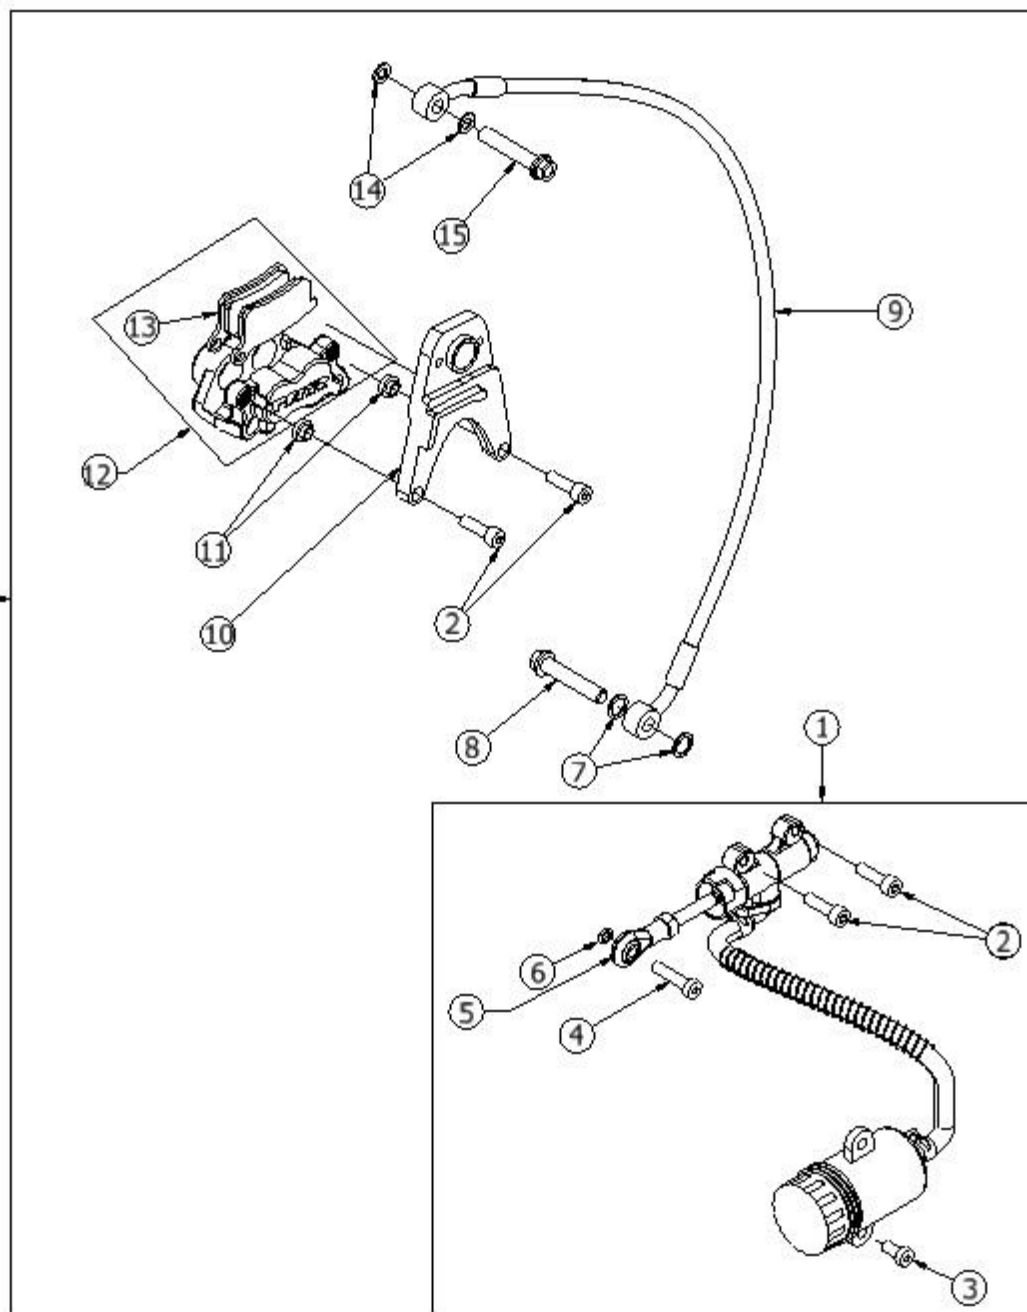

6. REAR BRAKE MASTER CYLINDER / CALIPER

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	6738			RR. BRAKE PUMP	1
2	1766			BOLT M6x25	4
3	4579			BOLT M6x10	1
4	1922			BOLT M6x25	1
5	4757			ROD END	1
6	1906			NUT	1
7	5101			COPPER WASHER M10	2
8	0196			RACOR BOLT M10	1
9	5337			HOSE, RR. BRAKE	1
10	0632			SUPPORT, CALIPER	1
11	6348			CENTERING	2
12	2637			MIR RACING RR. CALIPER	1
13	0896			BRAKE PADS	1
14	0035			COPPER WASHER M8	2
15	0197			RACOR BOLT M8	1
16	6589			BRAKE FLUID	1
17	0643	5963		MIR RACING RR. BRAKE KIT (550MM), REF: (1,5,7,8,9,12,13,14,15)	1

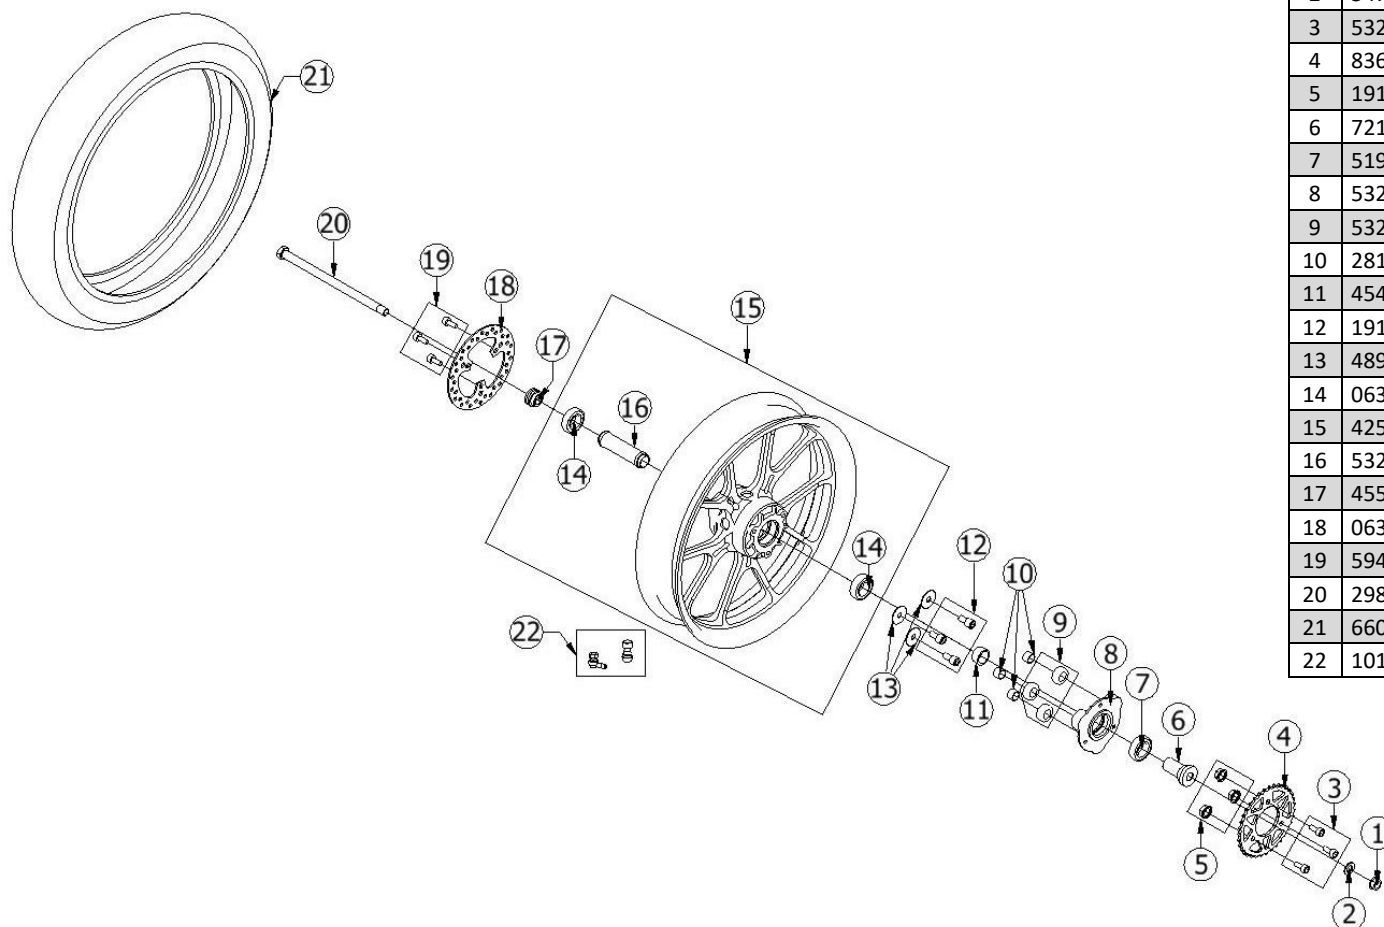


7. REAR WHEEL					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	5354			NUT M14, AXLE RR. WHEEL	1
2	5475			WASHER M14	1
3	5327			BOLT M10x20	3
4	8367	1527		SPROCKET 39T	1
5	1916			NUT M10	3
6	7214			L. COLLAR, RR. WHEEL	1
7	5198			BEARING	1
8	5328			CARRIER, SPROCKET	1
9	5325			SILENTBLOCK, CARRIER	3
10	2814			COLLAR, SILENTBLOCK	3
11	4549	4551	7171	L. COLLAR, RR. WHEEL	1
12	1917			BOLT M10x35	3
13	4893			WASHER M10	3
14	0635			BEARING	2
15	4255	5710	0642	RR. RIM, BEARING & COLLAR	1
16	5324	4552		INSIDE COLLAR, RR. RIM	1
17	4550			R. COLLAR, RR. WHEEL	1
18	0637			BRAKE DISK	1
19	5940			BOLT M8x20	3
20	2983			AXLE, RR. WHEEL	1
21	6603	7829	3948	RR. TIRE (S2)	1
22	1010	2613		VALVE	1

SPROCKET		
No.	Reference	Description
4	8357	32D / 33D / 34D / 35D / 36D / 37D / 38D / 39D / 40D / 41D / 42D / 43D

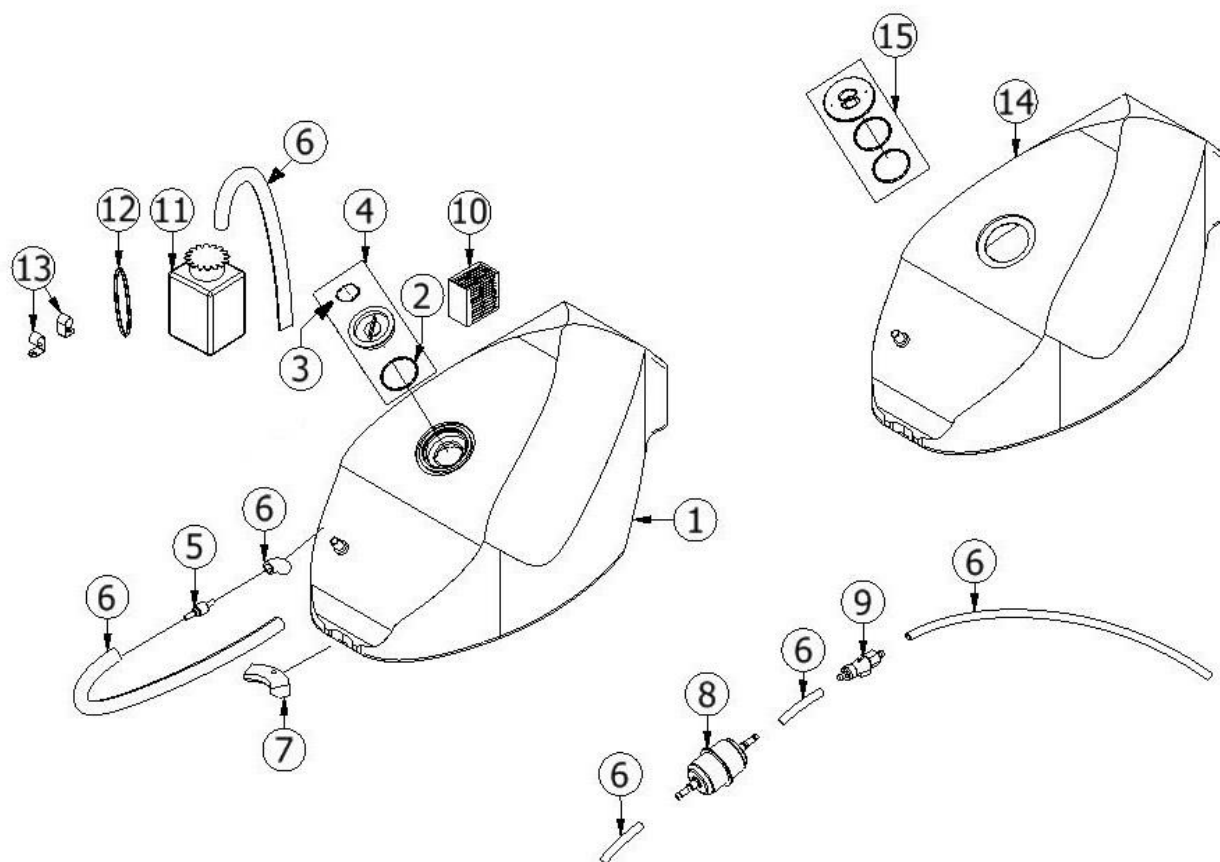


8. FUEL TANK


No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	1965	1793		FUEL TANK	1
2	7533			O-RING, FUEL CAP	1
3	7534			INSIDE O-RING, FUEL CAP	1
4	4118			FUEL CAP, FUEL TANK 2022	1
5	5531			NON-RETURN VALVE	1
6	1995			HOSE, FUEL TANK	1
7	5314			END, FUEL TANK	1
8	3658	3656		FUEL FILTER	1
9	5204			QUICK CONNECTOR, HOSE	1
10	4540	5146		MUZ EXPLOSAFE	1
11	5970			CATCH TANK, FUEL	1
12	1550			RUBBER BAND	2
13	4427			HOOK, RUBBER	2
14	8767	0445	2285	LARGE FUEL TANK	1
15	3525	3526	3524	FUEL CAP, FUEL TANK 2021	1

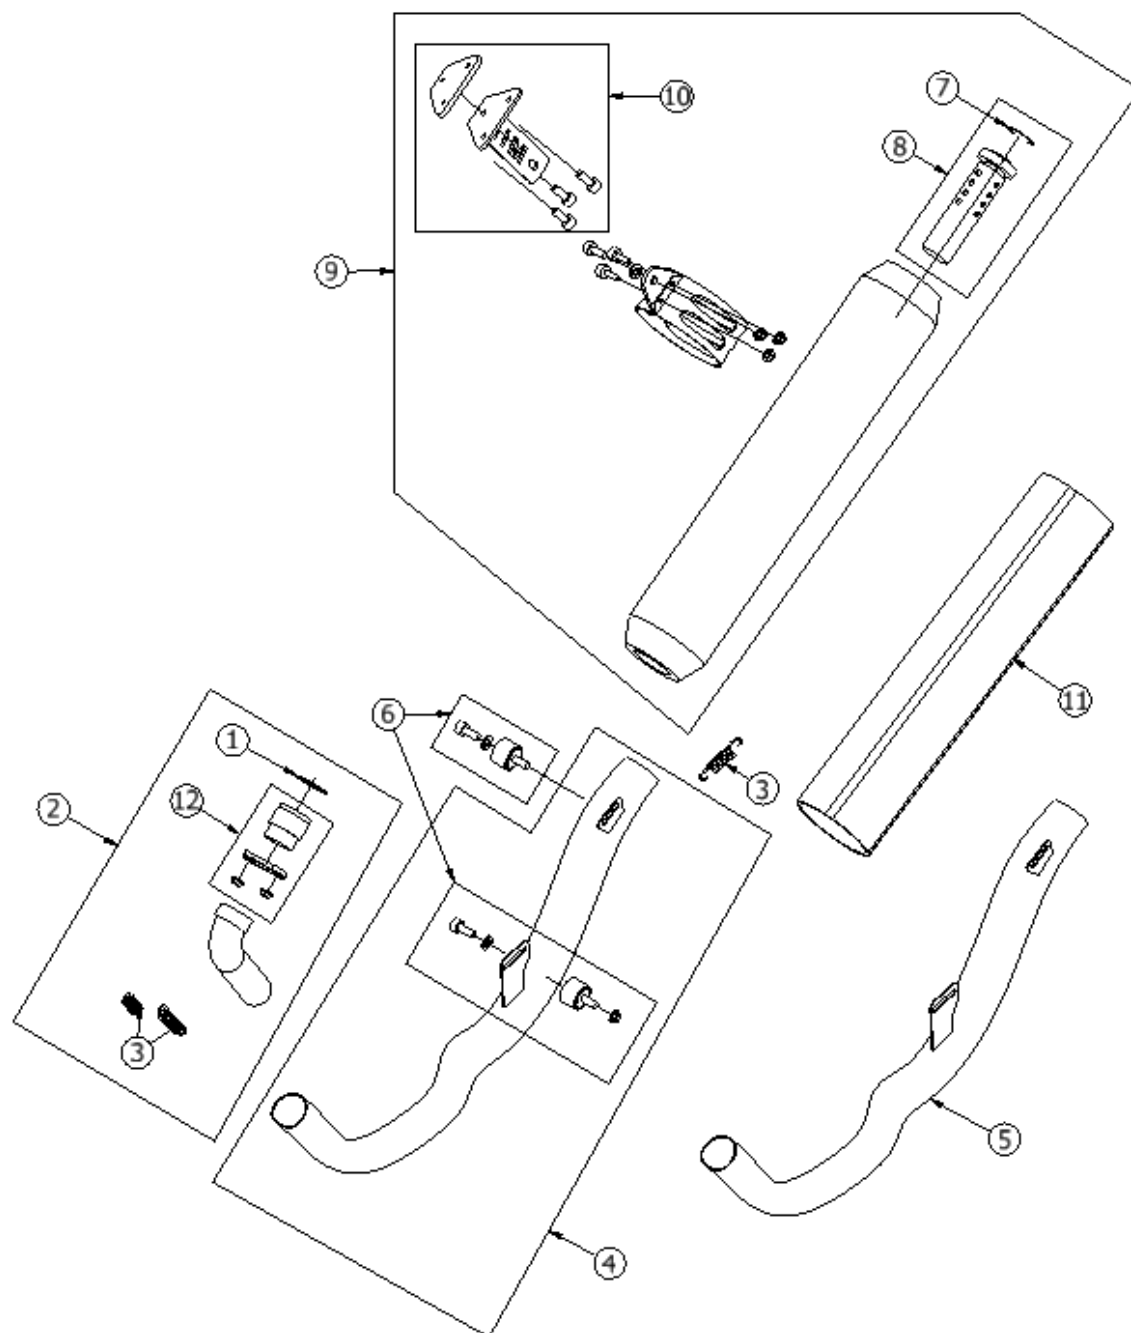
9. EXHAUST MUFFLER


No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	1887			GASKET, EXHAUST PIPE	1
2	4839			1º SECTION, GASKET & SHORT PIPE	1
3	3528			SPRING, PIPE EXHAUST	2
4	1409			2º SHORT SECTION, PIPE EXHAUST	1
5	6421			2º LONG SECTION, PIPE EXHAUST	1
6	1316			KIT SILENTBLOCK	2
7	6723			CIRCLIP, DB-KILLER	1
8	0268			DB-KILLER KIT	1
9	3204			EXHAUST KIT	1
10	3211			SUPPORT, EXHAUST	1
11	2754			GLASS WOOL	1
12	5855			INLET EXHAUST	1
	3203			SHORT EXHAUST SYSTEM	1
	6422			LONG EXHAUST SYSTEM	1

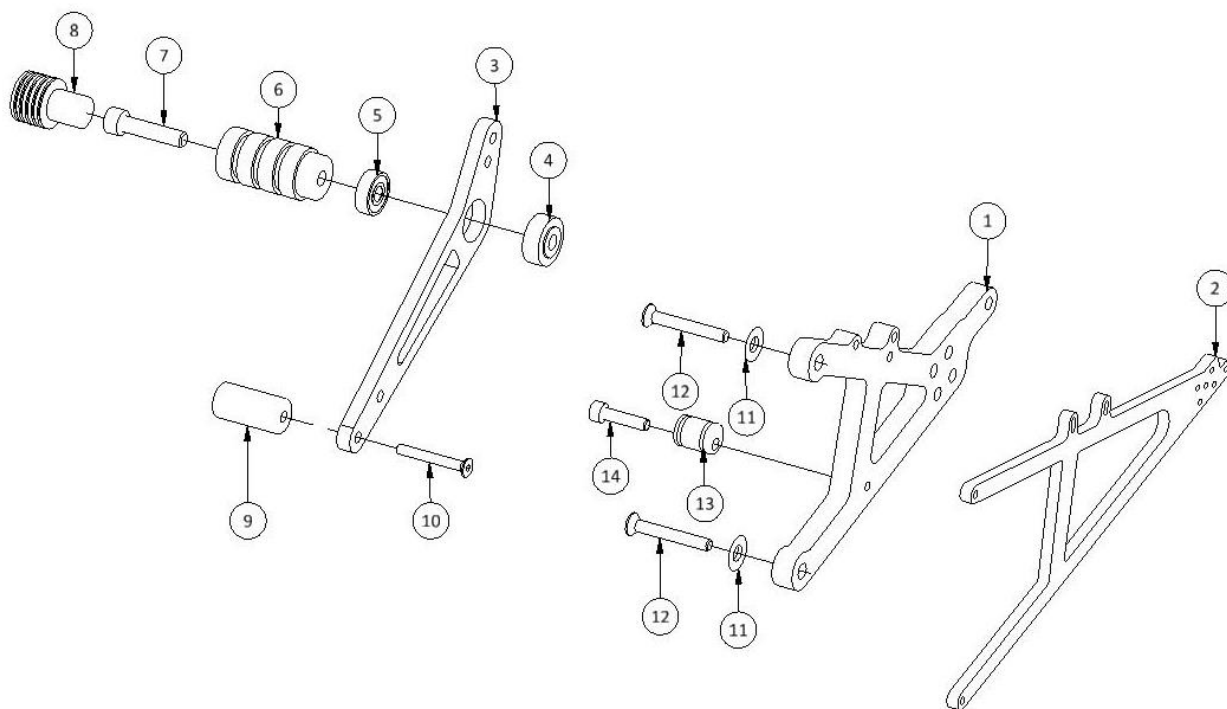
10. RIGHT STEP / REAR BRAKE PEDAL


No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	5980			R. HOLDER, STEP	1
2		5376		LARGE R. HOLDER, STEP	1
3	5377			BRAKE PEDAL	1
4	5379			SPACER, BRAKE PEDAL	1
5	5380	2387		BEARING, BRAKE PEDAL	1
6	4230			R. ARM, STEP	1
7	4777			BOLT M8x45	1
8	4111			NYLON, ARM	1
9	5381			LEVER TOE	1
10	1923			COUNTERSINK BOLT M6x25	1
11	4460			CONICAL WASHER	2
12	0629			BOLT M8x30	2
13	4815	1687		END, BRAKE	1
14	1922			BOLT M6x25	1

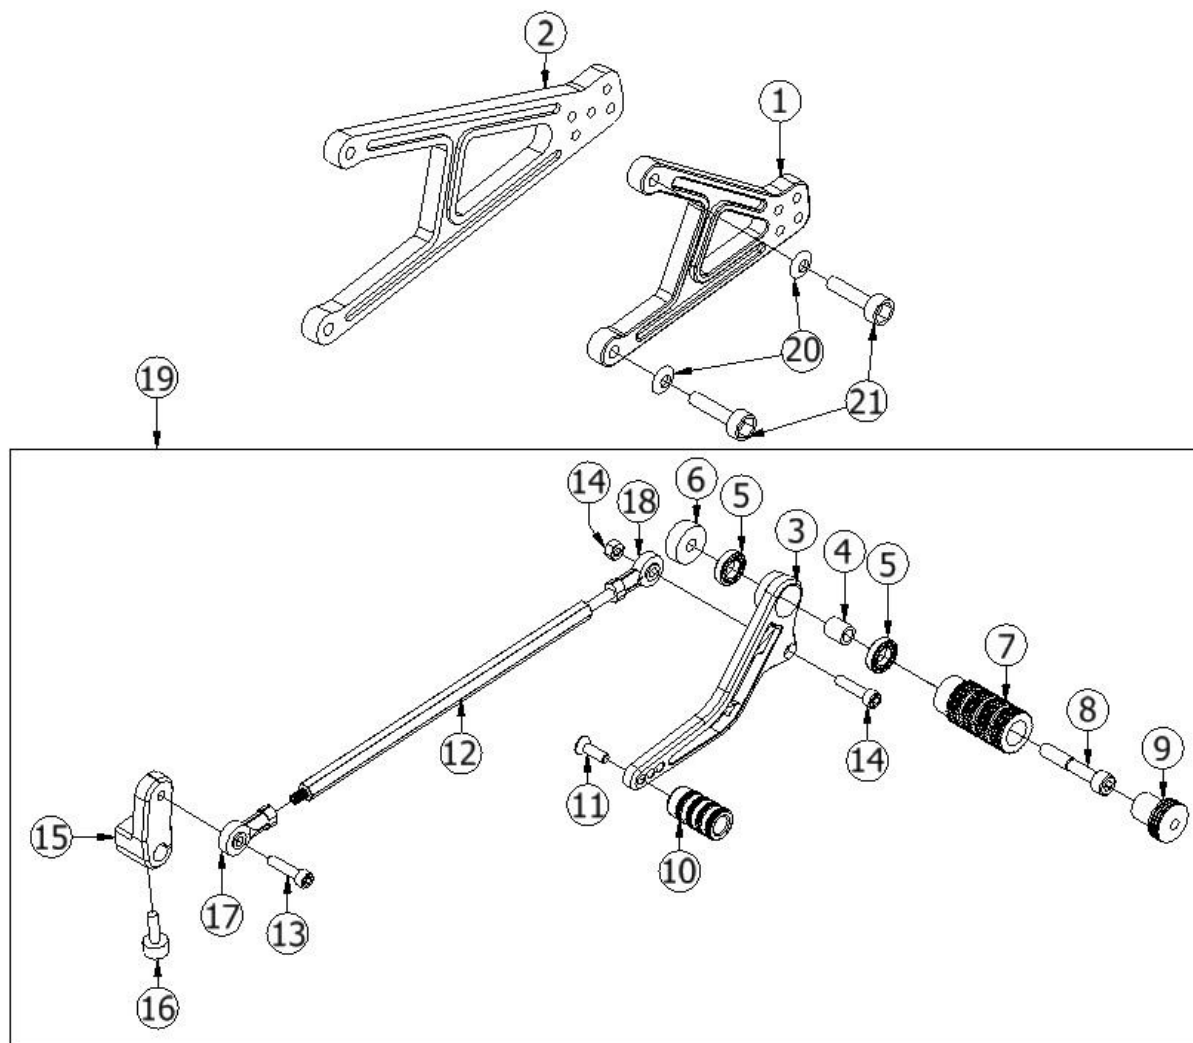
11. LEFT STEP / SHIFT PEDAL


No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	3907			L. HOLDER, STEP	1
2		4804		LARGE L. HOLDER, STEP	1
3	4173	4276		PEDAL SHIFT	1
4	7537			INSIDE COLLAR, PEDAL SHIFT	1
5	5380	7231		BEARING, PEDAL SHIFT	2
6	5379			COLLAR, PEDAL SHIFT	1
7	4230			L. ARM	1
8	7519			BOLT M8x55	1
9	4111			NYLON, ARM	1
10	5381			LEVER TOE, PEDAL SHIFT	1
11	1923			BOLT M6x20	1
12	0749	3842		ROD, SHIFT	1
13	1766			BOLT M6x20	1
14	1908			NUT M6	3
15	6739			FORWARDING, SHIFT	1
16	1922			BOLT M6x25	1
17	3838			L. MALE BALL JOINT M6	1
18	3839			R. MALE BALL JOINT M6	1
19	6735	6734		COMPLETE SHIFT SYSTEM	1
20	4460			CONICAL WASHER	2
21	0629			BOLT M8x30	2

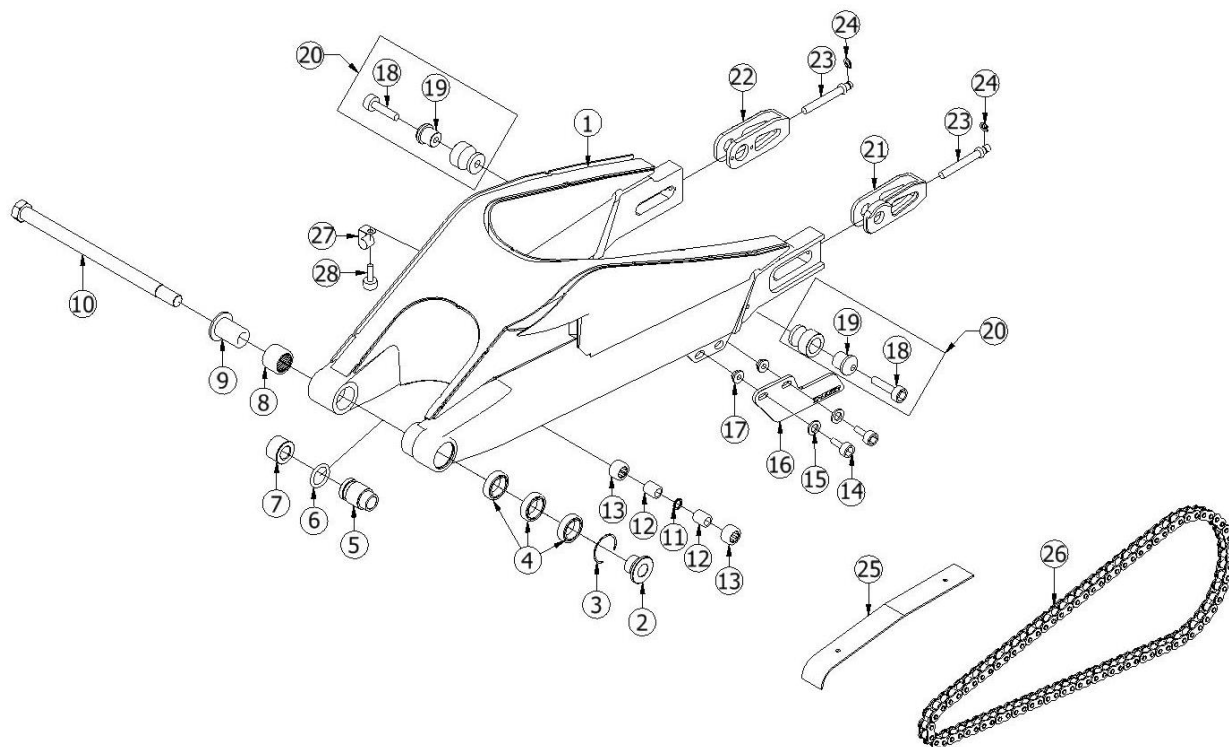

12. SWINGARM					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	4356			SWINGARM ALUMINIUM	1
2	7686			L. SPACER, SWINGARM	1
3	7683			C-RING, AXLE SWINGARM	1
4	7685			BEARING, SWINGARM	3
5	6287			L. INSIDE COLLAR, SWINGARM	1
6	7684			O-RING, INSIDE COLLAR	1
7	7687			R. INSIDE COLLAR, SWINGARM	1
8	7920			BEARING, SWINGARM	1
9	7689			R. COLLAR, SWINGARM	1
10	7460			AXLE, SWINGARM	1
11	5101			COPPER WASHER	1
12	5359			INSIDE COLLAR, SWINGARM-RR.CUSHION	2
13	5360			INSIDE BEARING, SWINGARM-RR.CUSHION	2
14	1766			BOLT M6x20	2

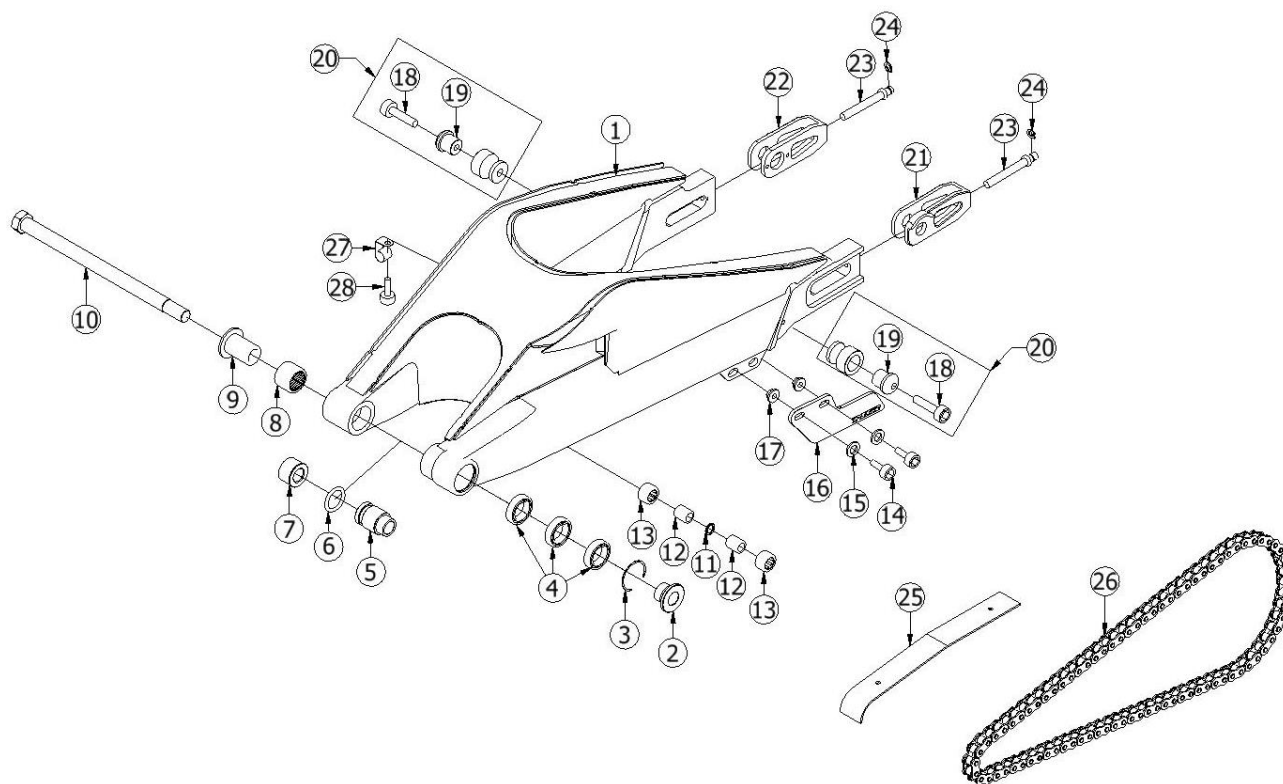


12. SWINGARM					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
15	5934			WASHER M6	2
16	7838	4792		CHAIN PROTECTOR, SWINGARM	1
17	1908			NUT M6	2
18	3188			BOLT M8x30	2
19	4541			NYLON, SUPPORT SWINGARM	2
20	4436			SUPPORT SWINGARM SET	2
21	2638			L. ADJUSTER, CHAIN	1
22	2641			R. ADJUSTER, CHAIN	1
23	4435			ADJUSTER BOLT, CHAIN	2
24	6624			C-RING, ADJUSTER BOLT	2
25	5453			SWINGARM PROTECTOR, CHAIN	1
26	7446	6702	6625	CHAIN	1
27	4427			HOLSE CLAMP, RR. BRAKE	1
28	7384			BOLT M5x10	1

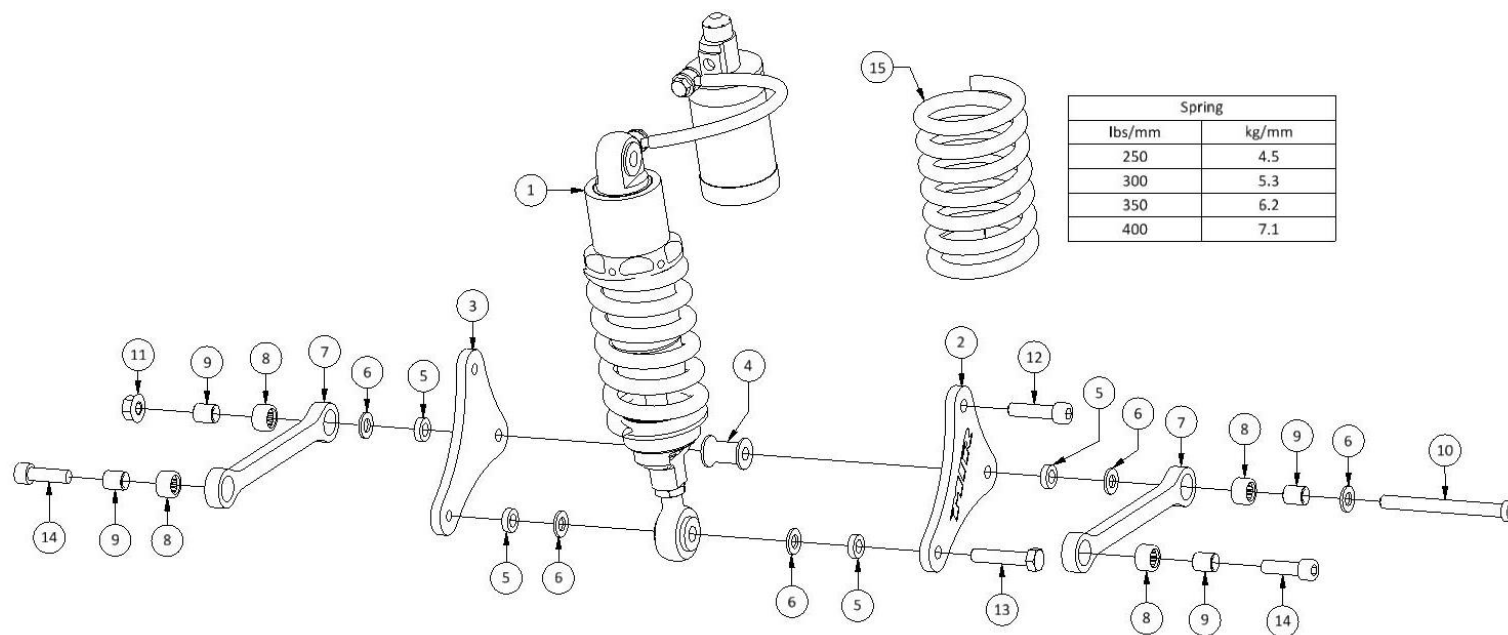


Spring	
lbs/mm	kg/mm
250	4.5
300	5.3
350	6.2
400	7.1

SPRING			
No.	Reference	Description	
		lbf/in	kgf/mm
15	3100	175	3,1
15	3097	225	4
15	4951	250	4,5
15	3099	275	4,9
15	3815	300	5,3
15	3814	350	6,2
15	3098	400	7,1


13. REAR SHOCK					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	6271	6267	5439	RR. CUSHION	1
2	3904			L. PLATE, CUSHION ARM	1
3	3905			R. PLATE, CUSHION ARM	1
4	5375			SPACER, CUSHION	1
5	5373			COLLAR, CUSHION	4
6	5371			WASHER M10	4
7	3908			ROD ASSY, CUSHION	2
8	5360			BEARING, ROD ASSY	4
9	5359			COLLAR, ROD ASSY	4
10	1918			BOLT M10x105	1
11	1916			NUT M10	1
12	7406			ALLEN BOLT M10x45	1
13	7407			HEX. BOLT M10x45	1
14	5505			BOLT M10x30	2

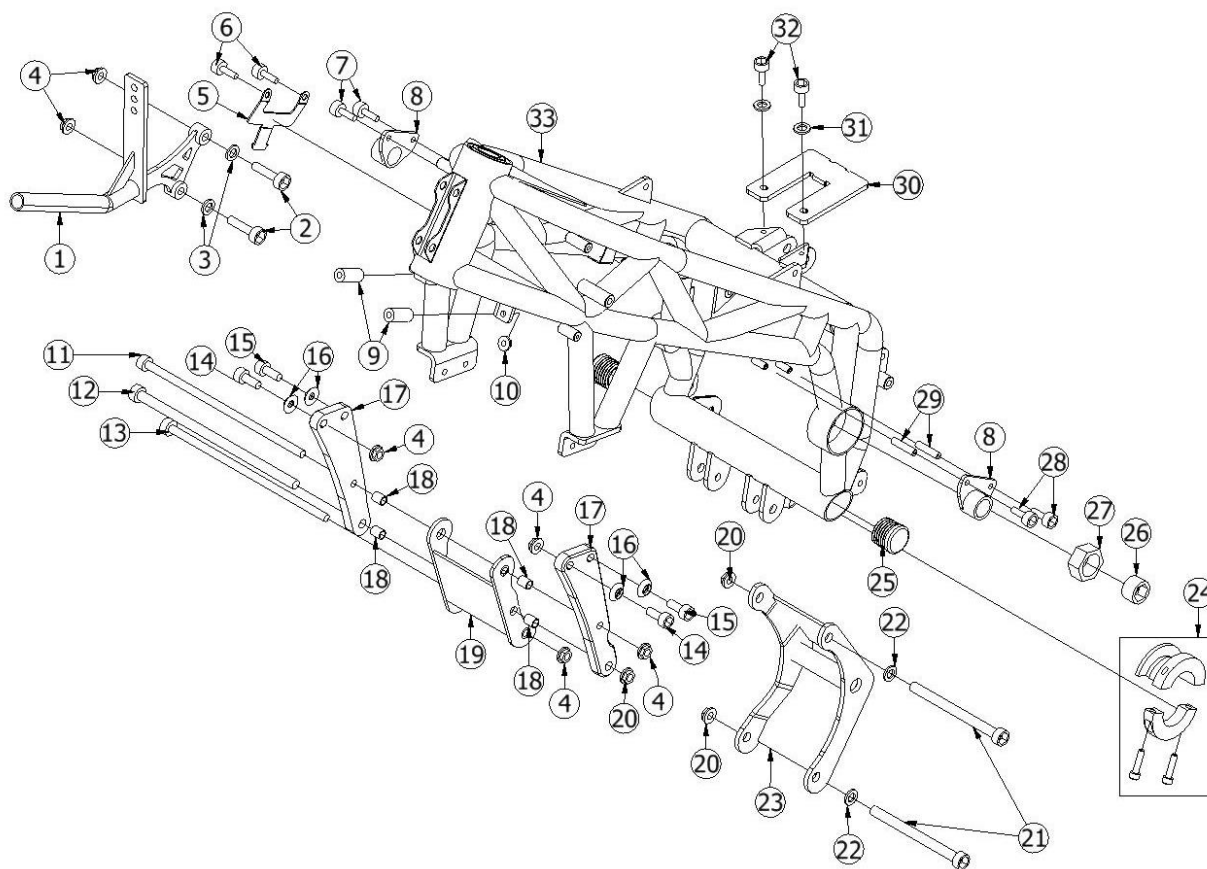

14. FRAME BODY					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	1770			FR. SUPPORT, COWL	1
2	0629			BOLT M8x30	2
3	1248			WASHER M8	2
4	1890			NUT M8	4
5	7144			HOLDER, COIL / CDI	1
6	1922			BOLT M6x25	2
7	4579			BOLT M6x10	4
8	5305			LATERAL HOLDER, ENGINE	2
9	4113	6410		STEERING TOP	2
10	1908			NUT M6	2
11	2447	7155		AXLE M8x220 (AXLE M8x210) , LATERAL HOLDER	1
12	3145	7156		AXLE M10x220 (AXLE M10x210) , LATERAL HOLDER	1
13	5280			AXLE M8x90	1
14	5185			BOLT M8x25	2
15	1253			BOLT M8x20	2
16	4460			CONICAL WASHER M8	4
17	2796			LATERAL HOLDER SET, ENGINE	1

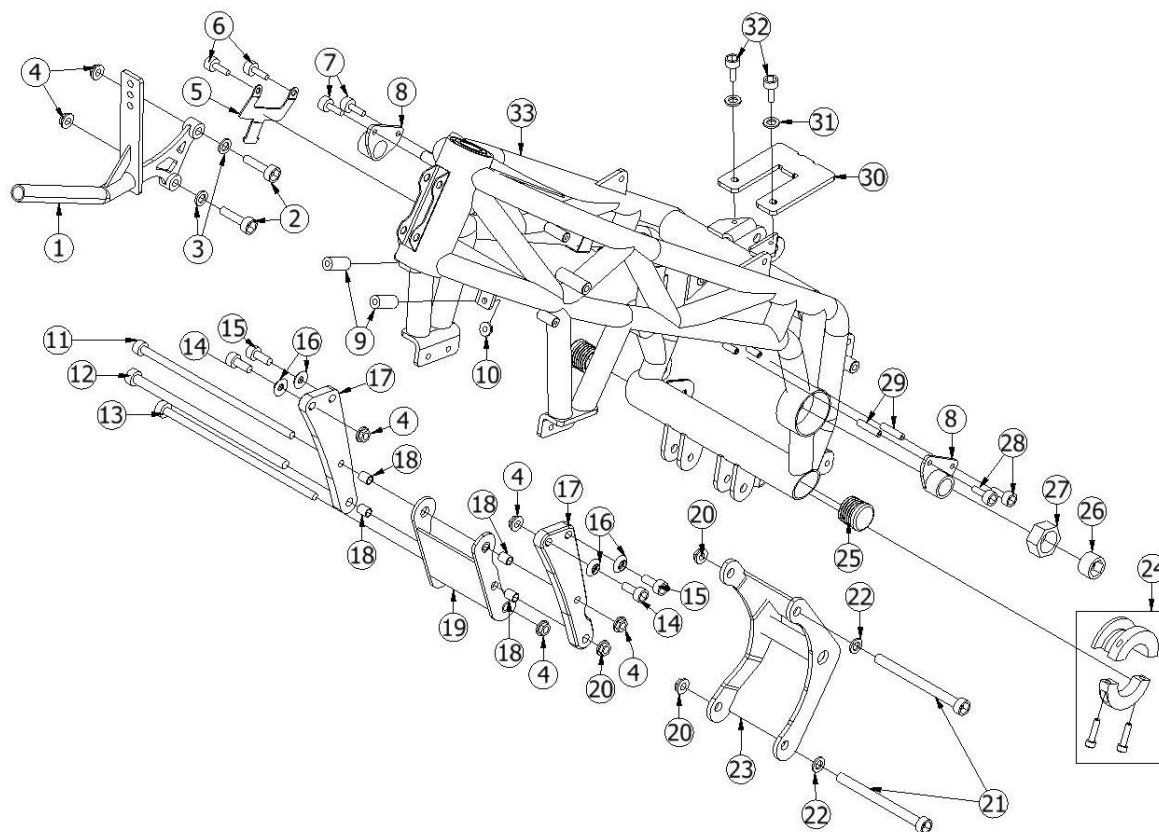


14. FRAME BODY					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
18	7692			COLLAR SET, WEDGE ENGINE	1
19	5954			FR. WEGDE, ENGINE	1
20	1916			NUT M10	3
21	2482			AXLE M10x120	2
22	5371			WASHER M10	2
23	5365			RR. WEDGE, ENGINE	1
24	3844			FRAME BODY PROTECTOR, CHAIN	1
25	6704			NYLON, FRAME BODY	1
26	4701			BOLT, FRAME BODY	1
27	2979			NUT, BOLT FRAME BODY	1
28	1254			BOLT M6x30	1
29	4955			COLLAR, L. HOLDER COWL	2
30	6606			PLATEN, VOLTAGE REGULATOR	1
31	5934			WASHER M6	1
32	1766			BOLT M6x20	2
33	5300			FRAME BODY	1
11, 12, 13, 17, 18, 19, 20, 21	2809			HOLDER KIT, FR. WEDGE	

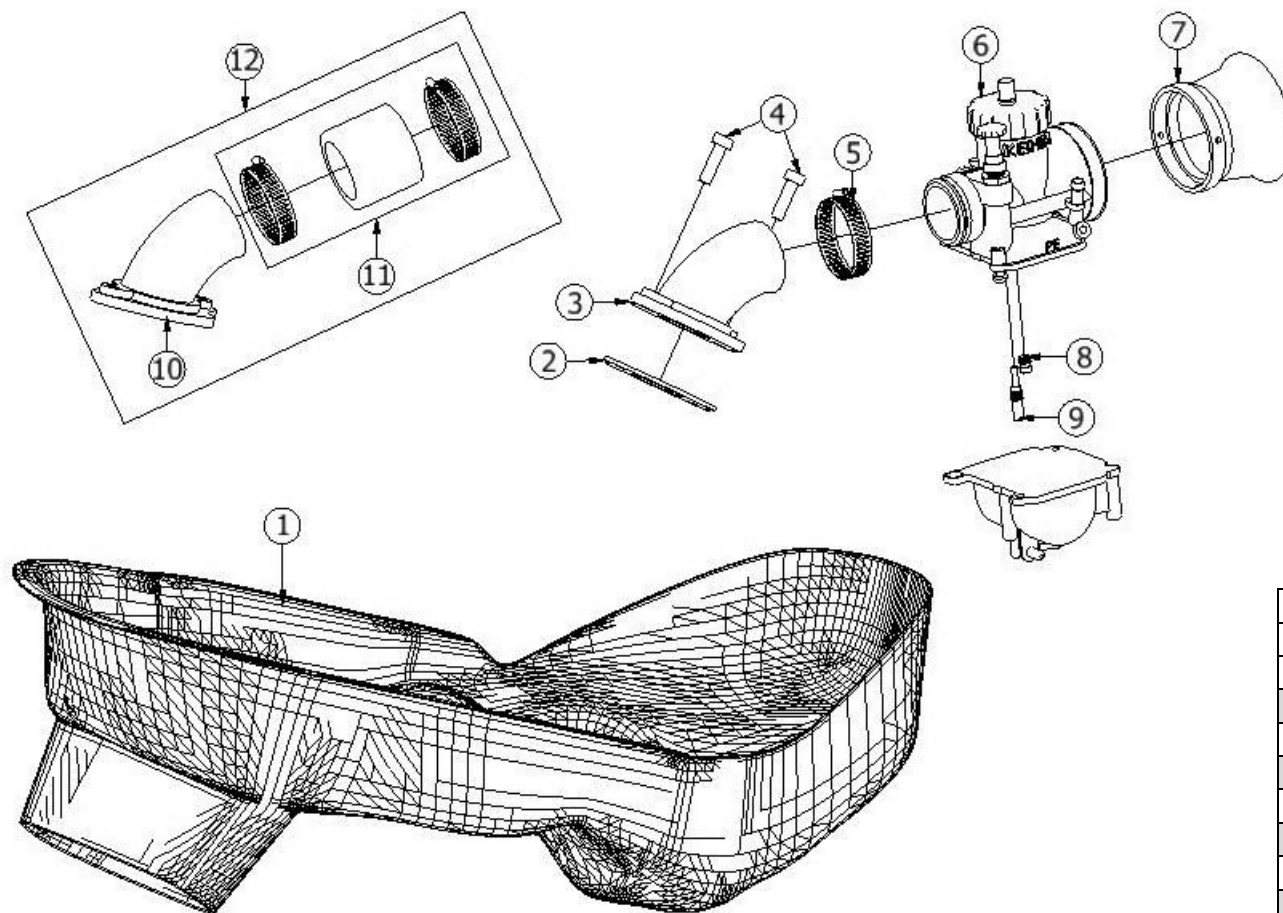


AIR JET		
No.	Reference	Description
9	1190	35 / 38 / 40 / 42 / 45 / 48 / 50

MAIN JET		
No.	Reference	Description
8	1191	102 / 105 / 108 / 110 / 112 / 115 / 118 / 120 / 130 / 132 / 135 / 138 / 140 / 142 / 145 / 148 / 150 / 155 / 160


15. INTAKE BODY					
No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	3242	8763		AIRBOX	1
2	6661			GASKET, ENGINE	1
3		3659		NOZZLE, ENGINE-CARBURETTOR	1
4		1766		BOLT M6x20	2
5		2571		CLAMP, NOZZLE	1
6	6343	1160		CARBURETTOR PE28	1
7	2855	2854		TRUMPET	1
8	1191			MAIN JET	1
9	1190			AIR JET	1
10		8246		ADMISSION INLET AL	
11		8242		ADAPTER 28MM MOTO 5	
12	8434			KIT INLET - ADAPTER	

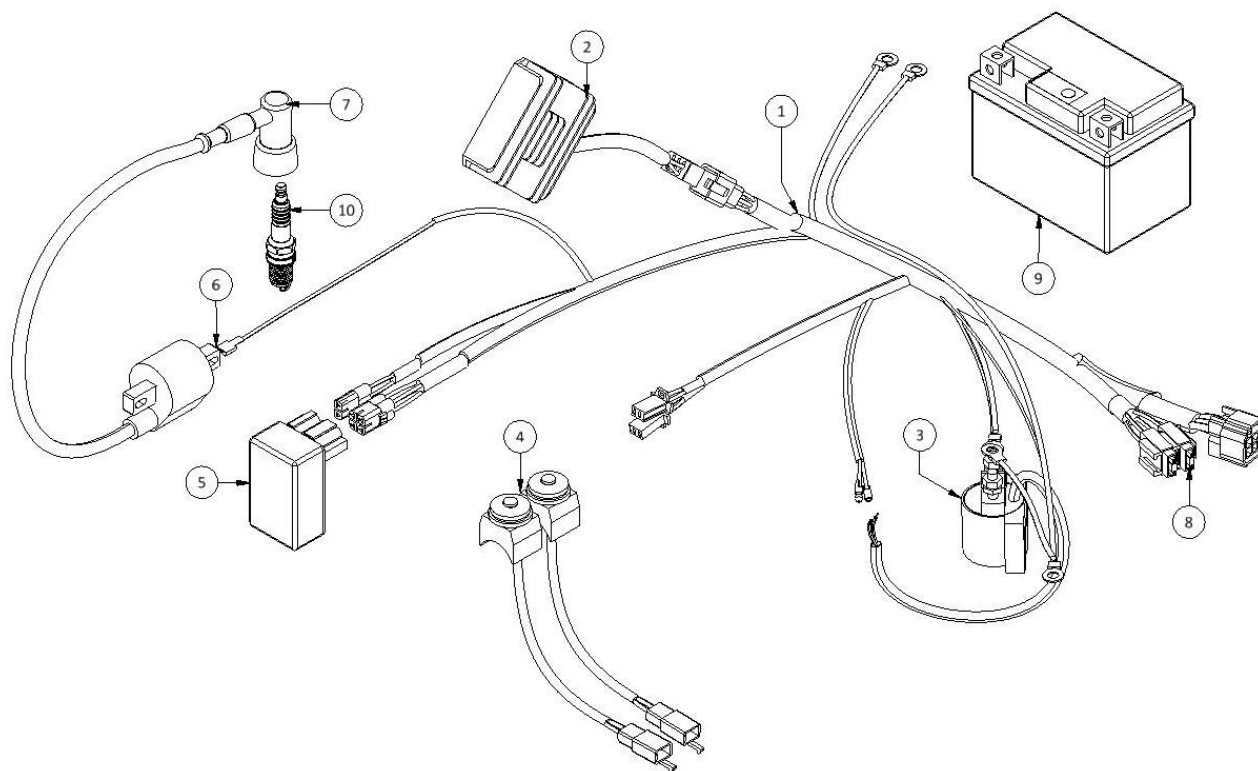
16. ELECTRICAL INSTALLATION

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	5435			WIRING LOOM	1
2	5495			VOLTAGE REGULATOR	1**
3	5349			START RELAY	1**
4	4754			ON & OFF ENGINE BUTTON	2
5	2110	3941		CDI	1**
6	2104			UP COIL & PIPE	1**
7	2607	5210		PIPE, SPARK PLUG	1**
8	7806			FUSE 15A	2**
9	6664	5436		BATTERY 12V	1
10	0543			SPARK PLUG	1**

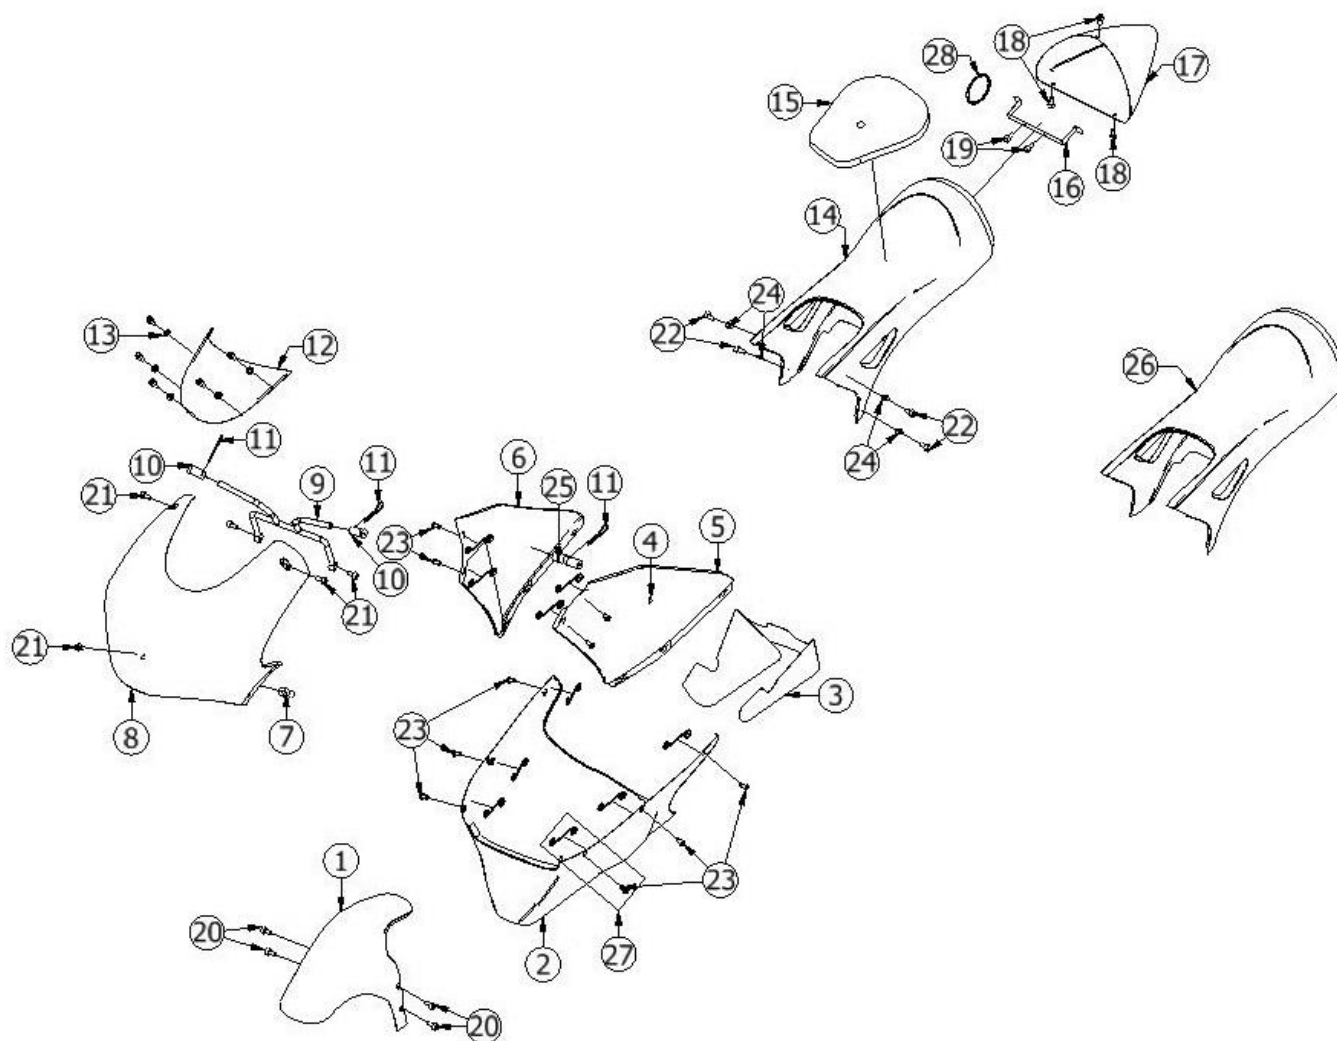
17. FAIRINGS

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	0444	5297		FR. FENDER	1
2	4526	1973		LOWER FAIRING	1
3	1758			AIR CHANNEL	1
4	5310			L. NYLON, LATERAL FAIRING	1
5	8765	4524		L. LATERAL FAIRING	1
6	8764	4525		R. LATEAL FAIRING	1
7	1542			NYLON, FR. FAIRING	1
8	4523	5429		FR. FAIRING	1
9	6634			HOLDER, FR. COWL	1
10	1351			NYLON, HOLDER	2
11	5312			R-CLIP	1
12	1102			SCREEN	1
13	6465	0651		BOLTS & WASHERS KIT, SCREEN	1
14	5528	1968		SEAT FAIRING	1
15	5391			SEAT FOAM	1
16	1904			SUPPORT, BATTERY	1
17	1896	3319		TAIL FAIRING	1
18	7384			BOLT M5x10	3
19	5937			BOLT M6x10 REDUCED HEAD	2
20	4579			BOLT M6x10	4
21	4305			BOLT M6x16	3
22	4808			BOLT M8x16	4
23	5524			QUICK BOLT	10
24	4460			CONICAL WASHER	4
25	5311			R. NYLON, LATERAL FAIRING	1
26	5392	1969		LARGE SEAT FAIRING	
27	0520			QUICK BOLT KIT, FAIRING	
28	3916			RUBBER BAND, BATTERY	1

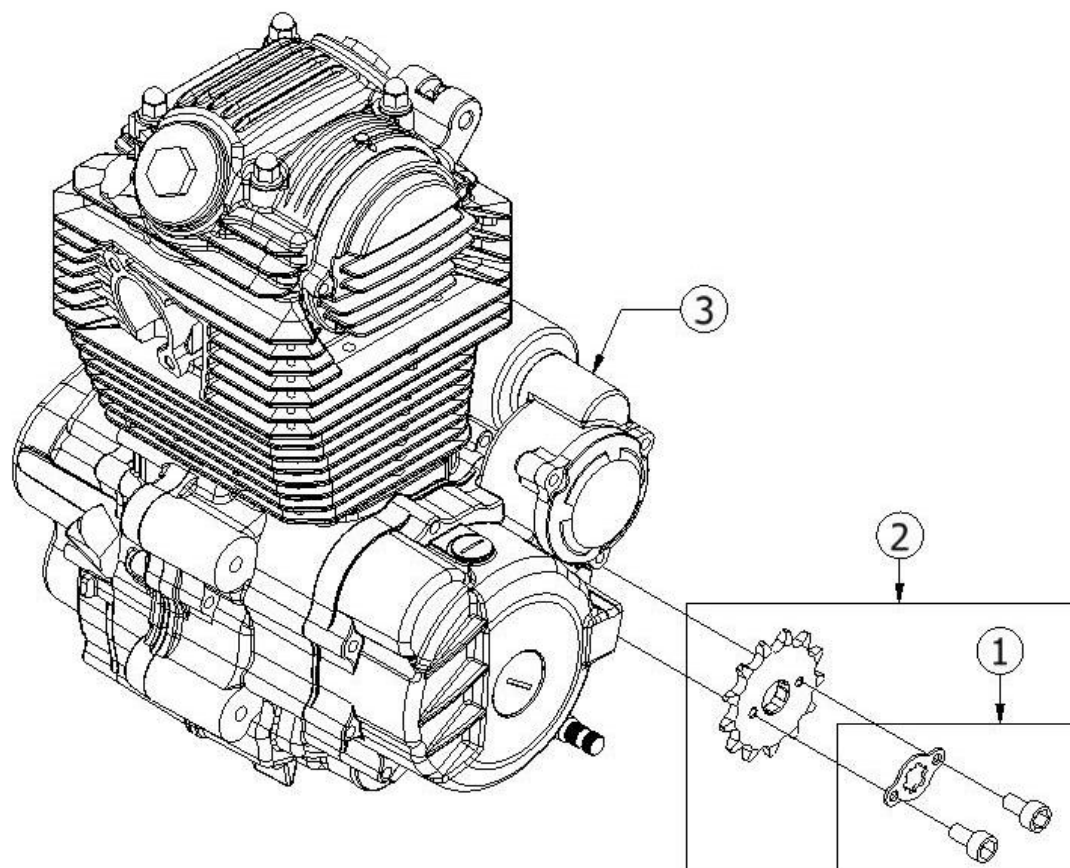
18. ENGINE

No.	Reference			Description	Reqd No.
	STD	OP1	OP2		
1	0653			PLATEN & BOLT M6x8	1
2	5652			PINION, PLATEN & BOLT M6x8	1**
3	1827			MOTO 5 ENGINE	1

SPROCKET 415

No.	Referencia	Descripción
2	5652	12D / 13D / 14D / 15D / 16D / 17D / 18D